

PROJECT Anchoring

SOLUTION
Anchorfix-S

HOLLOW BRICK ANCHORING ADHESIVE

Anchoring just got easier with Sika Anchorfix, a fast curing anchoring adhesive for standard applications around the house.



BUILDING TRUST



What you will need

- Sika Anchorfix-S & caulk gun
- Drill
- Brush
- Vacuum cleaner / blow-out pump
- Rod / rebar or other anchor system
- Perforated sleeve

Step 1

Drill a hole with an electric drill to the diameter and depth required. Drill hole diameter must be in accordance with anchor and perforated sleeve size.




Step 2

Hole must be thoroughly cleaned at least 2 times by brush. Insert perforated sleeve completely into the drill hole.



Step 3


Pump approximately twice until both parts come out uniformly. Do not use this material! Inject adhesive into the perforated sleeve while slowly drawing back the static mixer. Avoid entrapping air.

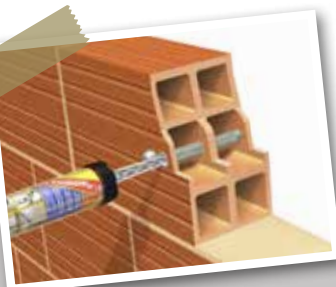

Step 4


Insert the anchor with a rotary motion into the filled perforated sleeve. Use the adequate steel rod size.

NB: The anchor must be placed within the open time

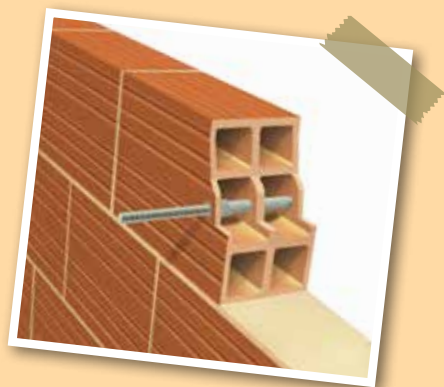

Step 5

During the resin hardening time, the anchor must not be moved or loaded. Wash tools immediately with Sika® Colma Cleaner. Wash hands and skin thoroughly with warm soap water.

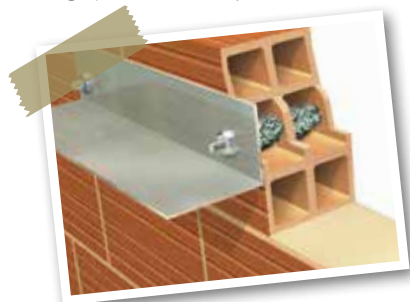

Expert Tips

May also be used for:

- Hanging heavy curtains
- Security gates and burglar guards
- Metal stair case hand rails